



Part numbers on following page.

IMPORTANT: THIS IS DATED INFORMATION. When requesting service or replacement parts for your appliance please provide model number and serial number. All parts listed in this manual may be ordered from an authorized dealer.



**Stocked  
at Depot**

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	
1	Starter Section Assembly		22072B	Y
2	Damper Assembly		34515	
	Damper Control		13229	
	Damper Weight		19785A	
3	Standoff - Top	Qty. 4 req.	11864i	
4	Refractory - Back		13319	
5	Refractory - Side	Qty. 2 req.	13320A	
6	Front Ashlip	Qty. 2 req.	13214A	
7	Door Track (Lower)	Qty. 2 req.	15425	
	Door Track (Upper)	Qty. 2 req.	4012-002	
8	Door Support	Qty. 2 req.	4012-108	
9	Grate		GR3	Y
10	Refractory - Hearth		13321B	
11	End Door Support		23954	
12	End Ashlip		13215A	
13	End Retainer Assembly		13237B	
14	Grate Retainer (for End Retainer Assembly)	Qty. 2 req.	13294B	
	Firescreen Assembly	Qty. 4 req.	12267	Y
	Firescreen Handle		4021-150	
	Firescreen Rod	Qty. 4 req.	11866B	Y
	Nailing Flange	Qty. 4 req.	12692	
	Outside Air Kit		AK14	
	Fastener Pack		13580	
	Long Cable Tie	Qty. 2 req.	19954	
	Outside Air Shield		33271	Y
	AK14 Installation Instructions		35145	
	Outside Air Handle		17333	
	Refractory Retainer		11847	
	Refractory Standoff		13327D	
	Side Refractory Bracket	Qty. 2 req.	13328	
	Strip Protectors	Qty. 2 req.	18320	
	Installation Instructions & Owner's Manual		34955	