




# FIRESIDE REALWOOD-FRW 18

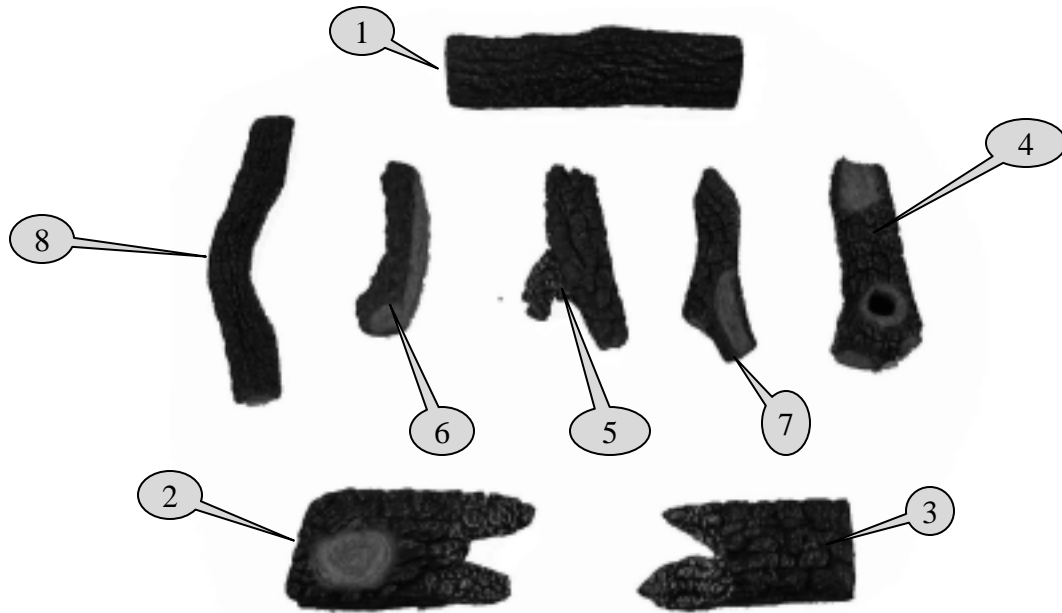


Step 1

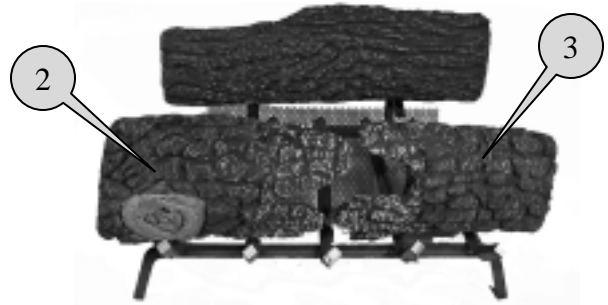

Step 2

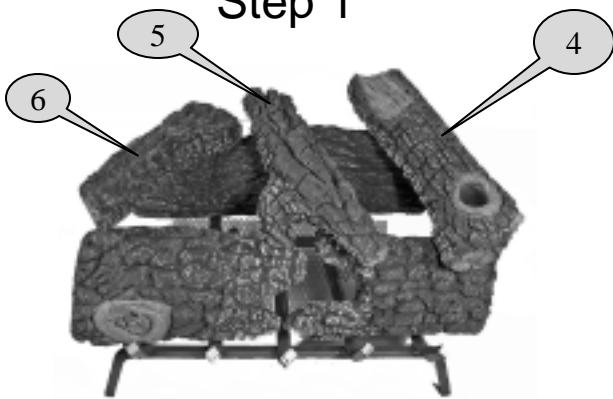

Step 3

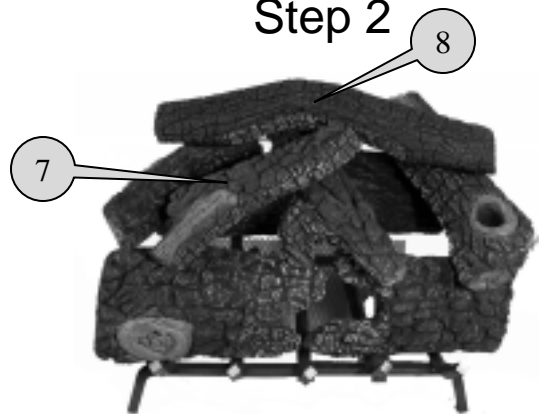

Step 4

**Important:** Do not discard, keep with your Installation Manual